



EGRO ONE QUICK CLEANING REFERENCE

Weekly Cleaning of Powder Module




1 Open the front door of the powder module.



2 Press the power button to switch off the powder module. Pull out the tube connected to the mixer.



3 Unlock the mixer by turning the knob to the right. Take the mixer unit out.

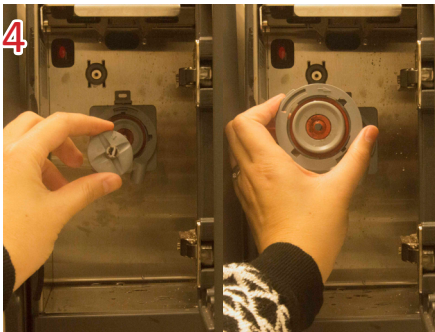


4 Pull out the mixer ring and the knob simultaneously.



5 Dissolve an Egro Milk System Cleaning Tablet in a container with warm water. Place pieces of the mixer unit into the solution. Allow to soak for at least 1 hour.



6 Wipe the powder module with a clean damp towel. Remount the knob and the ring back into the powder module pushing firmly until it clicks.

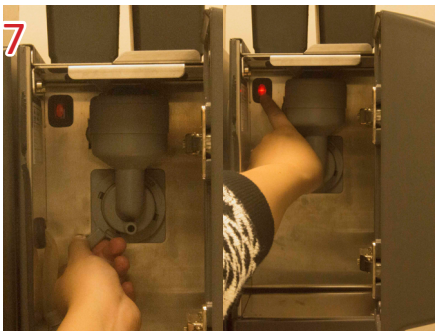

7 Reassemble the mixer unit into the powder module. Turn the knob to the left to lock. Reconnect tube to the mixer. Push power button to turn on the powder module.



Cleaning Product Re-Order Information:
To re-order the Egro Milk System Cleaning Tablets,
please send your orders or requests to
orders@ranciliogroupna.com.

Egro Milk System Cleaning Tablets
Product # 69000426

We offer Auto-Ship Cleaning Supplies Program to automatically ship cleaning products to you.
Call (630) 914-7900 to learn more about our program.